







How to calculate the weight of package?

To estimate whether a given configuration will not exceed the maximum load for a choosed control, sum the weight of the fabric and the slat weights.			
Surface [m2] * Fabric weight [kg / m2] * 1.15			
127 mr	n (89 mi
	Number of slats * 0,040 kg	Number of slats * 0,032 kg	